

HYDRO-PNEUMATIC BLIND RIVET SETTING TOOLS

TAURUS® 1-4

A

- * 1463004
- * 1435999
- * 1435568
- * 1436002
- * 1435509
- * 1435769
- * 1435568
- * 1440012
- T1 - 1435558
- T2 - 1435764
- T3/T4 - 1435886

B

- * 1434227
- * 1446012
- * 1435630
- * 1435629

C

- * 1435488
- * 1435485
- * 1435631
- * 1435632

D

- * 1435635
- * 1435671
- * 1435633

E

- 1457746
- 1435681
- 1446013
- 1435612
- 1457747
- 1457748
- T1 - 1457745
- T2/T3 - 1457866
- T4 - 1457992

F

- 1446025
- 1435642
- 1435686

G

- 1446028
- 1457840
- 1435663
- 1435664

H

- 1446025
- 1435642
- 1435686

I

- 1435480

J

- 1457749
- 1457869
- 1457960
- 1457953
- 1435486
- 1435492
- T1 - 145751
- T2 - 1457860
- T3 - 1457952
- T4 - 1457994

K

- * 1435675

L

- * 1435688

M

- T1 - 1435658
- T2/T3 - 1435841
- T4 - 1436007
- T1 - 1435656
- T2/T3 - 1435670
- T4 - 1435675
- T1 - 1436559
- T2/T3/T4 - 1436635
- T2/T3/T4 - 1446082
- T1 - 1435660
- T2 - 1435825
- T3/T4 - 1435937
- T1 - 1435660
- T2 - 1435834
- T3/T4 - 1435937

Taurus 1

- 1435849
- 1435677
- 1435842
- 1435863
- 1435664
- 1446028
- 1651223

Taurus 2

- 1435766
- 1435663
- 1446028
- 1457840
- 1435842
- 1435664

Taurus 3

- 1435766
- 1435663
- 1446028
- 1457840
- 1435842
- 1435664

Taurus 4

- * 1435480
- 1435998

Taurus 1

- 1446167
- 1435524
- 1435619

Taurus 2 - 4

- 1435519
- 1435524
- 1446167

Taurus 1

- 1446030
- 1435484
- 1457750
- 1515051
- 1435667
- * 1435647
- 1457694
- 1457693
- 1446026
- 1445773

Taurus 1



- 1446030
- 1435484
- 1457750
- 1446009
- T2 - 1457862
- T3/T4 - 1457956
- 1435648
- * 1435647
- 1457694
- 1457693
- 1445773
- T2 - 1446073
- T3/T4 - 1446100



Taurus 2 - 4

- 1446030
- 1435484
- 1457750
- 1435667
- 1446009
- T2 - 1457862
- T3/T4 - 1457956
- 1435648
- * 1435647
- 1457694
- 1457693
- 1445773
- T2 - 1446073
- T3/T4 - 1446100

HYDRO-PNEUMATIC BLIND RIVET SETTING TOOLS

TAURUS® 1-4

	No.	
	1434227*	O ring
T3,T4	1434860*	Nosepiece 17/45
T2	1434955*	Nosepiece 17/24
T2	1434973*	Nosepiece 17/27
T2	1434974*	Nosepiece 17/29
T2	1434975*	Nosepiece 17/32
T1	1434976*	Nosepiece 17/18
T3,T4	1434977*	Nosepiece 17/36
T1	1434994*	Nosepiece 17/20
T3,T4	1434999*	Nosepiece 17/40
T1	1435018*	Nosepiece 17/22
	1435472*	Flat gasket
	1435480*	Flat gasket
	1435484	O ring
	1435485*	Piston Seal
	1435486	O ring
	1435488*	Supporting ring
	1435492	Al nut
T1	1435507*	Jaw Pusher
T1	1435508	Bottom
T1	1435509	Centre part
	1435519	O ring
	1435524	O ring
T1	1435558	Nozzle tube
	1435568*	Jaws
	1435612	Sealing ring
	1435629*	O ring
	1435630*	Rod seal
	1435631	Draw bar
	1435632*	Piston seal
	1435633*	Piston seal
	1435635*	Rod seal
	1435642	Slider
	1435647*	Rod seal
	1435648	Spacer cage
T1	1435656*	Piston seal
T1	1435657*	Guide ring
T1	1435658*	Piston seal
T1	1435659*	Rod seal
T1	1435660*	O ring
	1435663	Adapter
	1435664	Retainer
	1435667	Connecting nipple
T2, T3	1435670*	Piston seal
	1435671*	O ring
	1435675*	Piston seal
T1, T2	1435677	Spent mandrel container, complete
T1	1435680	O ring
	1435681	Seal holder, complete
	1435686	Orifice
	1435688*	O ring
T2	1435761	Bottom
T2	1435764	Nozzle tube
T2, T3, T4	1435766	Connecting piece nut
T2	1435768*	Jaw Pusher
T2	1435769	Centre part
T2, T3	1435825*	Guide ring
T2, T3	1435834*	O ring
T2	1435839	O ring
T2, T3	1435841*	Piston seal
	1435842	Lock washer
T1	1435849	Connecting piece nut
T3,T4	1435874	Bottom

	No.	
T3,T4	1435886	Nozzle tube
T3, T4	1435900	Rubber foot
T3, T4	1435927	O ring
T4	1435937*	O ring
T3, T4	1435964	Spent mandrel container, complete
	1435998	Grip extension
	1435999	Damping ring
T3,T4	1436000*	Jaw Pusher
T3,T4	1436001	Centre part
	1436002*	Jaw housing
	1436003	Steel head sleeve
T4	1436006*	Guide ring
T4	1436007*	Piston seal
T2	1436371	Rubber foot
FF 1, T1	1436394	Rubber foot
	1445773	Housing screw, short
	1446012*	O ring
	1446013	Oil screw plug
	1446025	Activation button
T1	1446026	Stopper
T1	1446027	Snap ring
	1446028	Retaining spring
	1446030	Sealing ring
T2	1446073	Stopper
T2, T3, T4	1446082	Snap ring
T2, T3, T4	1446089	Screw
T3,T4	1446100	Stopper
	1446167	Snap ring
	1457693	Piston housin complete
	1457694	Control piston complete
T1	1457745	Tool head, assembled
	1457746	Resetting piston, complete
	1457747	Distributing valve, complete
	1457748	Grip complete
T1	1457749	Air cylinder, complete
	1457750	Pressure relief valve, complete
T1	1457751	Air piston, complete
T1	1457752	Cylinder complete
T2, T3, T4	1457840	End cap
T2	1457856	Tool head, assembled
T2	1457859	Air cylinder, complete
T2	1457860	Air piston, complete
T2	1457861	Cylinder complete
T2	1457862	Silencer complete
T3	1457950	Air cylinder, complete
T3	1457952	Air piston, complete
T3	1457953	Cylinder complete
T3,T4	1457956	Silencer complete
T4	1457992	Tool head, assembled
T4	1457993	Air cylinder, complete
T4	1457994	Air piston, complete
T4	1457995	Cylinder complete
	1463064*	Spring
T1	1515051	Silencer complete
T1	1651223	End cap

* Wearing parts



You will find spare part kits from page 371.
You will find detailed nosepiece allocation tables from page 134.